

---

# Product Information

## ALARM SYSTEM UA201/6 CL

---

This system was especially developed for BMW.

The alarm system is switched on and off with the standard central locking system at the driver's door. The alarm system is only switched on in the position with central locking engaged.

In the case of alarm, the optical and the acoustic alarm is indicated by the car's own signal indicators: the acoustic signal with the standard horn, the optical with the turn signal.

The alarm lasts 30 seconds per interval.

When the alarm is activated, the car cannot be started until the alarm system is switched off. It is impossible to start the car during the alarm.

The UA 201/6 CL is operated by two independent systems:

1. Protection of the interior through the ultrasonic indicator

The interior of the car is monitored by a constant ultrasonic field. If the ultrasonic field is changed by movement, for example by reaching through an open window or sun roof, or by smashing or removing a window, the alarm is triggered immediately. The ultrasonic movement indicator triggers the alarm again after 30 seconds if there is still movement in the car.

2. Protection through contacts

The doors and the trunk are protected by standard contacts for the lighting of the interior and the trunk. The front hood is secured by a special contact which is part of the installation kit.

The complete system consists of the Basic System No. 9 418 300 and an installation kit according to the automobile type.